

MODEL: 50332ACB

ASSEMBLY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

READ INSTRUCTIONS ALL THE WAY THROUGH
PRIOR TO ASSEMBLY.

THIS FOUNTAIN SHOULD TAKE APPROXIMATELY 15
MINUTES TO ASSEMBLE.


MAKE SURE ALL PARTS ARE FIRMLY TIGHTENED.

UNPACK THE FOUNTAIN


YOU SHOULD HAVE RECEIVED THE FOLLOWING
PARTS: (2) POLES WITH LEAVES, FOUNTAIN BODY,
RESERVOIR, SPLASHGUARD, PUMP WITH LIGHT, A
EXTRA BULB AND TRANSFORMER.

FOUNTAIN ASSEMBLY


**1. FEED PUMP POWER CORD THROUGH HOLE
IN RESERVOIR, THEN ATTACH BULB TO BULB
CLIP IN RESEVOIR AS SHOWN.**

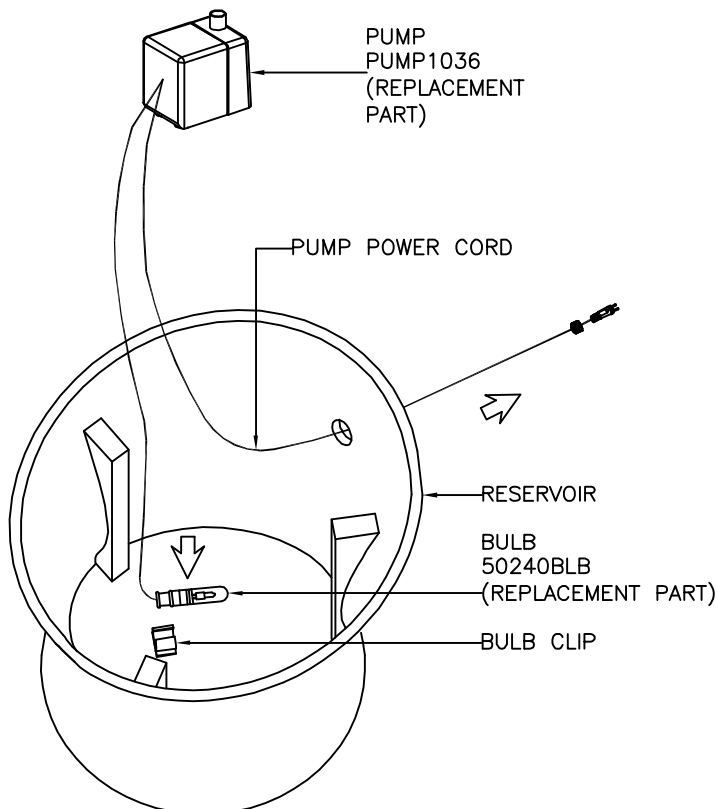

2. ATTACH PUMP TO RUBBER HOSE.

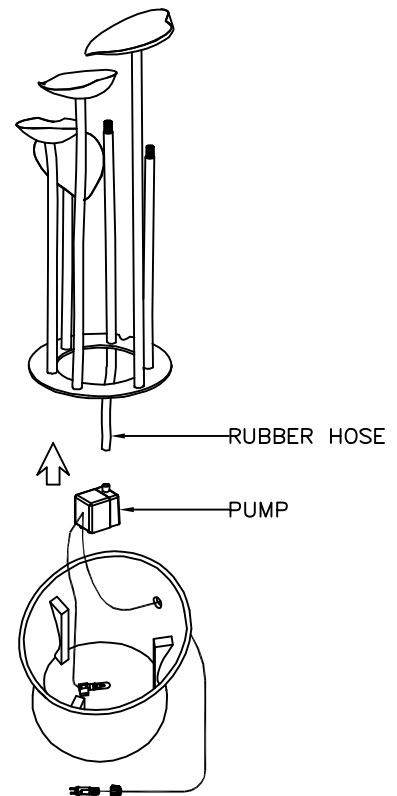


3. PLACE FOUNTAIN BODY INTO RESERVOIR.

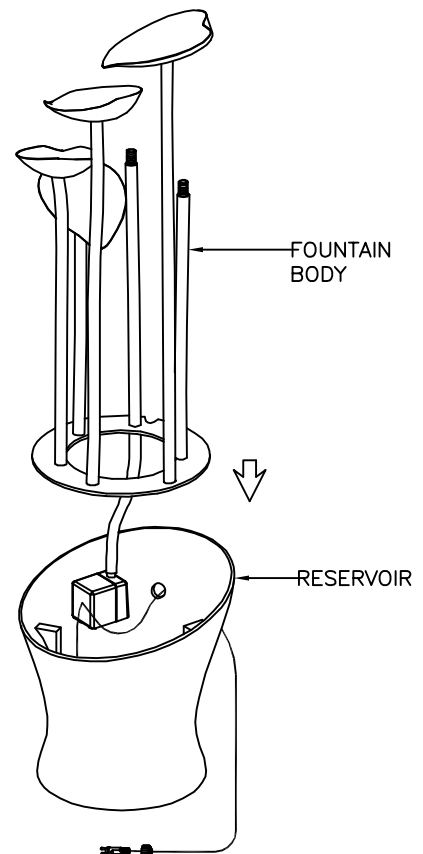

MODEL: 50332ACB
ASSEMBLY INSTRUCTIONS
READ AND SAVE THESE INSTRUCTIONS


FOUNTAIN ASSEMBLY

4. SCREW POLE-2 TO TOP OF POLE-1, THEN SCREW POLE-4 TO TOP OF POLE-3.

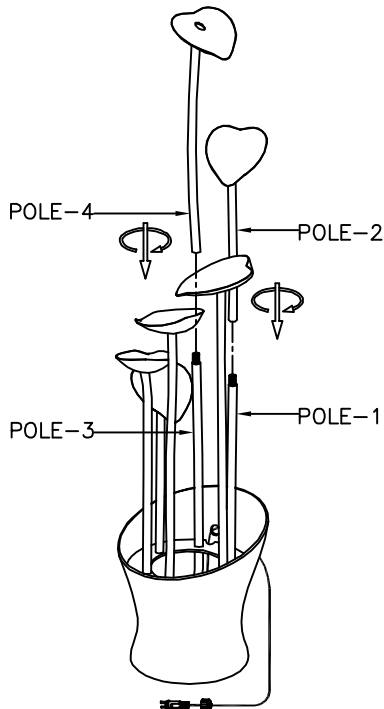


5. FILL RESERVOIR WITH 0.9 GALLONS OF WATER TO COMPLETELY SUBMERSE THE PUMP.

NOTE: DISTILLED WATER IS RECOMMENDED TO REDUCE MINERAL DEPOSITS AND BACTERIA BUILD-UP.

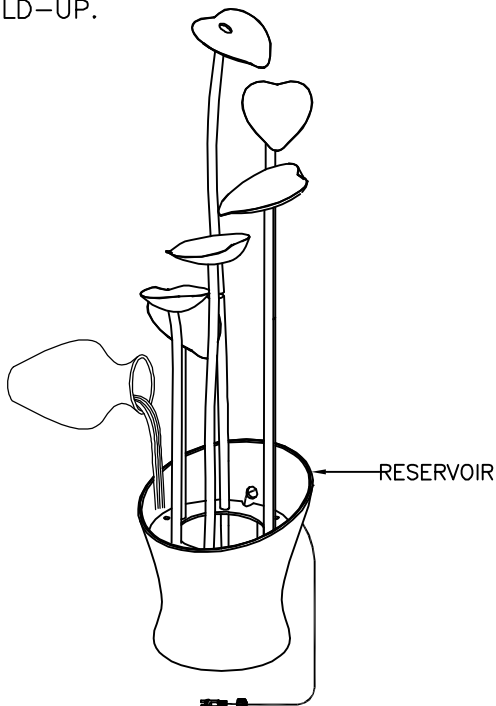


6. JOIN THE CONNECTORS AT TRANSFORMER AND SCREW THE CAP TO CONNECTOR TIGHTLY TOGETHER. PLUG TRANSFORMER INTO SOCKET.

7. TEST WATER RUNNING, ADJUST THE WATER FLOW CONTROL VALVE ON PUMP IF NEEDED.

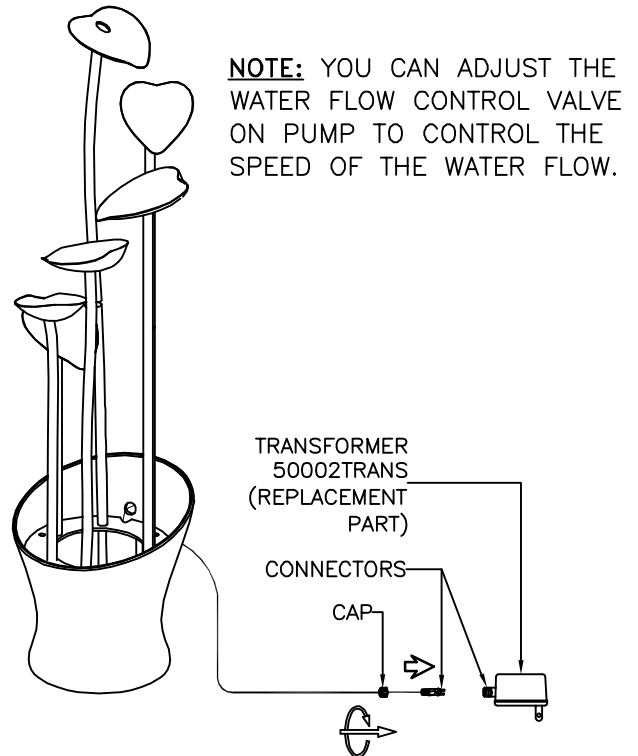

8. SLIDE SPLASHGUARD INTO RESERVOIR TO COVER THE HOLE. YOUR NEW FOUNTAIN IS READY FOR USE.

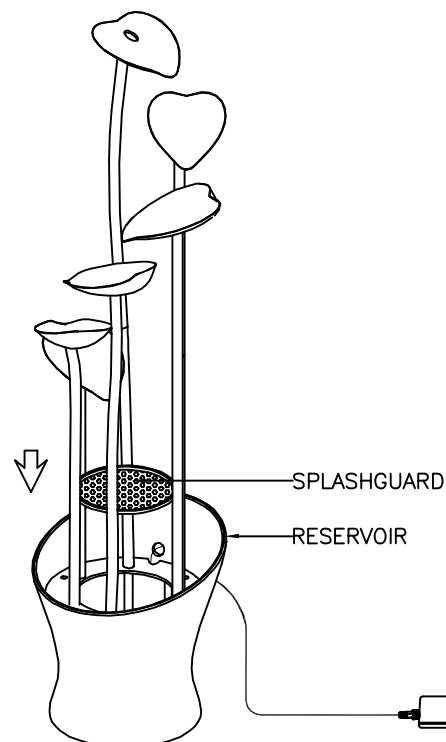

MODEL: 50332ACB

ASSEMBLY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

TROUBLE SHOOTING:

1. IF YOUR FOUNTAIN DOES NOT WORK, CHECK PLUG AT THE SOCKET. MAKE SURE THE PLUG IS FULLY AND PROPERLY INSERTED INTO THE WALL OUTLET.
2. NEXT CHECK TO MAKE SURE THE OUTLET IS POWERED.
3. IF THE FOUNTAIN STILL DOES NOT WORK, PLEASE CONTACT YOUR DISTRIBUTOR OR PLACE OF PURCHASE.

SPLASHING DISCLAIMER:

SPLASHING MAY OCCUR WHEN FOUNTAIN IS INITIALLY TURNED ON. PROTECT SURROUNDING SURFACES AS NEEDED.

IMPORTANT PUMP INFORMATION:

PUMP MUST BE FULLY SUBMERSED IN WATER WHILE OPERATING.

WATER:

TO REDUCE MINERAL DEPOSITS AND BACTERIA BUILD UP THE USE OF DISTILLED WATER IS RECOMMENDED.

WARNING:

* ONCE A WEEK INSPECT FOUNTAIN, FLOOR AND ADJACENT WALL FOR MOISTURE BUILD-UP AND CLEAN AS NECESSARY. THIS IS ESPECIALLY IMPORTANT FOR HUMID ENVIRONMENTS.

** THIS FOUNTAIN IS RATED FOR INDOOR AND OUTDOOR USE.

*** THIS UNIT MUST BE CONNECTED TO A SUPPLY CIRCUIT THAT IS PROTECTED BY A GROUND FAULT CIRCUIT INTERRUPTER (GFCI). THE GFCI SHOULD BE TESTED ON A ROUTINE BASIS. TO TEST THE GFCI, PUSH THE TEST BUTTON. THE GFCI SHOULD INTERRUPT POWER. PUSH THE RESET BUTTON. POWER SHOULD BE RESTORED. IF THE GFCI FAILS TO OPERATE IN THIS MANNER, THE GFCI IS DEFECTIVE.

AVAILABLE PARTS ARE:

50240BLB (BULB)
PUMP1036 (PUMP)
50002TRANS (TRANSFORMER)